


ASSEMBLY INSTRUCTIONS

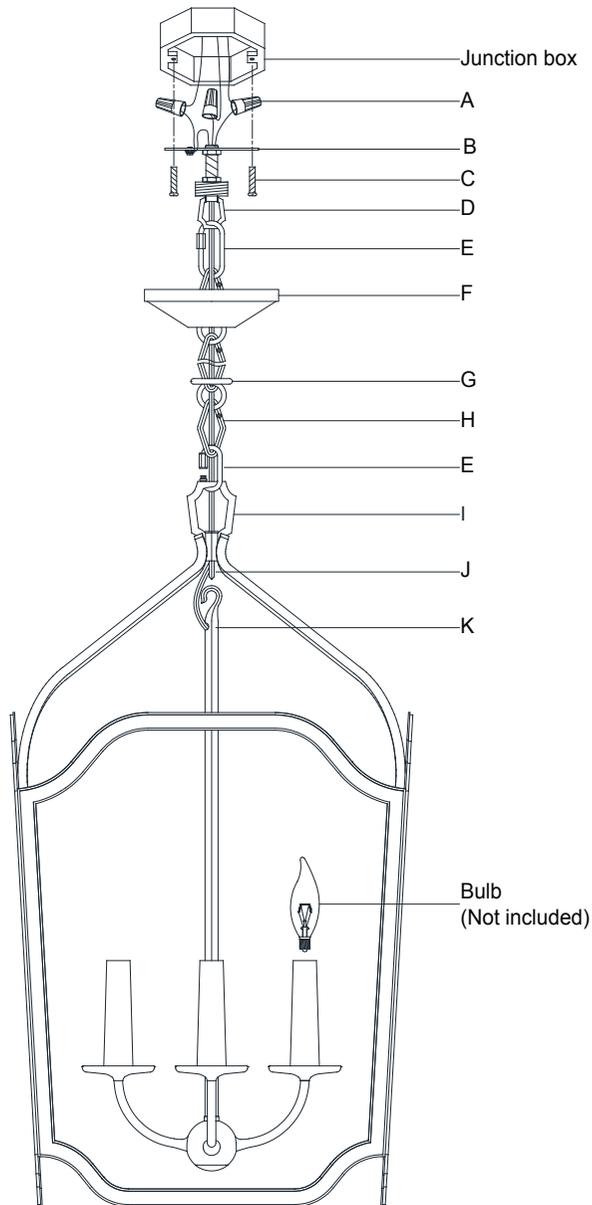

Ancaster Medium Blacksmith Lantern

Item # RL 5781

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the box.
2. Remove the collar loop (D) from the chain (H) by unscrewing the quick link (E).
3. Install the mounting plate (B) and collar loop (D) to the junction box with mounting screws (C) provided. Using a wrench (not provided) secure the mounting plate (B) and collar loop (D) to the threaded nipple using provided hex nuts.
4. Install the canopy (F) to collar loop (D) and secure with collar ring (G). If needed, adjust canopy (F) height by loosening hex nuts and screwing collar loop (D) up or down then re-secure.
5. With the fixture desired height, shorten the chain (H) as needed using the chain pliers (not included).
6. Open the chain quick link (E), then attach the chain quick link (E) to the collar loop (D). Secure the chain quick link (E).
7. Open the chain quick link (E) from the opposite side then attach to the fixture loop (I). Secure the chain quick link (E).
8. Hang the fixture cluster hook (K) to the ring (J), then pass the fixture wires through the hole.
9. Weave the fixture wires through the chain (H).
10. When you reach the canopy (F) and collar loop (D), measure the wires then cut, be certain to leave enough length to connect the wires in the junction box.
11. Strip the insulation on the fixture wires about 5/8".
12. Loosen the collar ring (G) and let the canopy (F) slip down the chain (H) carefully.

RALPH LAUREN



